


2.4 Safety settings (parallel to cooking programmes)

2.4.3 Electrical safety circuits

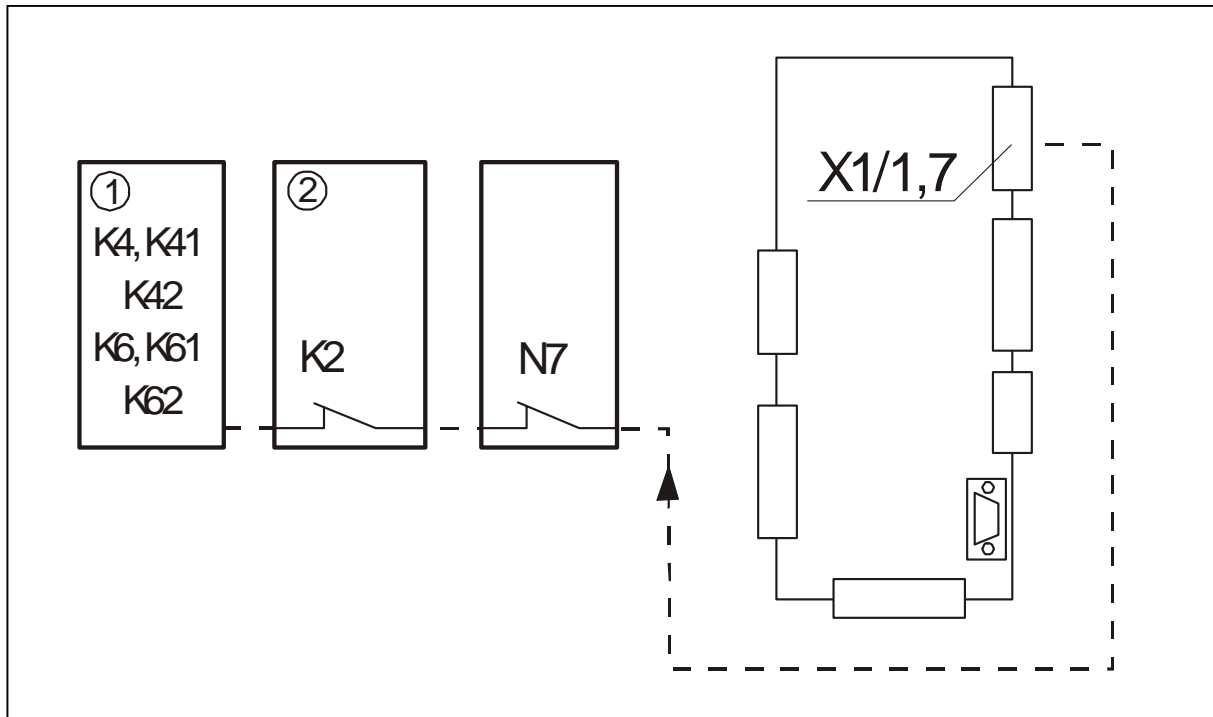

Information:

The electronic control system is supplemented by the following deactivation elements:

- Capillary probe with safety thermostat N7: deactivates convection heating 1 whenever the critical oven temperature is exceeded (from STB N7 no error message is given out). The capillary probe is mounted either in the oven or outside above the oven on the oven inner case below the insulation.
- Convection heating 1 /steam heating interlock 2
To avoid an overload, only one of the two heating variants can be activated at a time.



Check:

STB N7 has tripped:

- Oven doesn't become warm when convection heating (from STB N7 no error message is given out).



Cross reference:

- Service Handbook 5. Trouble shooting and Error Codes Electronic